LSPro2 Service Manual





TABLE OF CONTENTS

CHAPTER 1: SERIAL NUMBER LOCATION

CHAPTER 2: ENGINEERING MODE

2.1	Engineering Mode4
2.2	Engineering Mode Overview

CHAPTER 1: Serial Number Location

1-1 Serial Number Location



CHAPTER 2: Engineering Mode

2.1 ENGINEERING MODE

- 1) To enter Engineering Mode, press & hold the
- INCLINE DOWN "▼" and SPEED UP "+" keys at the same time
- for 3-5 seconds until Engineering Menu appears on the display.
- 2) Use the INCLINE and SPEED UP and DOWN keys to select a parameter.



- 3) Press ENTER to enter a parameter setting.
- 4) Use the INCLINE and SPEED UP and DOWN keys to change the parameter.
- 5) Press the START key to save the change to the parameter.
- 6) Press and hold the STOP key to exit Engineering Mode and return to normal operation.

CHAPTER 2: Engineering Mode

2.2 ENGINEERING MODE OVERVIEW

MODE	FUNCTION	DESCRIPTION
ENG 0	Display Test	Start Key – LCD/LED on
		Stop Key – LCD/LED off
		Any Other Key - Will show on the display window.
		Hold the STOP key for 3 seconds to return to the Engineering Menu.
ENG 1	Hardware Test	Motor & Incline Motor Test.
ENG 2	Auto Calibration	Auto calibrates the speed only.
ENG 3	Switch Function	Use the INCLINE or SPEED UP and DOWN keys to switch DEMO
		MODE off or on(Demo on=1 & Demo off=0 on DISTANCE window).
		Use the START key to select unit (1=KM & 0=Mile on TIME window).
ENG 4	Information	Accumulated Time and Distance
		Press and hold the START key for 5 seconds to clear all data.
		Remarks: Unit of Time is Hour.
		Unit of Distance is KM or Mile based on your set.
SECOND LEVEL	Software Version	To Get to ENG 8 - Enter into ENG 3, the press and hold the SPEED UP
ENG 8		and INCLINE DOWN key at the same time for 3-5 seconds.
		Press ENTER at P0 - Software version.
		Press ENTER at P1 - Select speed up rate (normal or quick).
		Press ENTER at P3 - Hold the START key to clear all data.

★ "START" key to save the change.

*** Demo off**-- console will display **Figure A** when you set up Demo on; **Demo on**--60 seconds later after remove the safety key, the console will enter into DEMO ON MODE. The LED and LCD will display in turns (**Figure B**).



FIGURE A

FIGURE B